GÜNKO

ELEGANT WALL ASSEMBLY INSTRUCTION
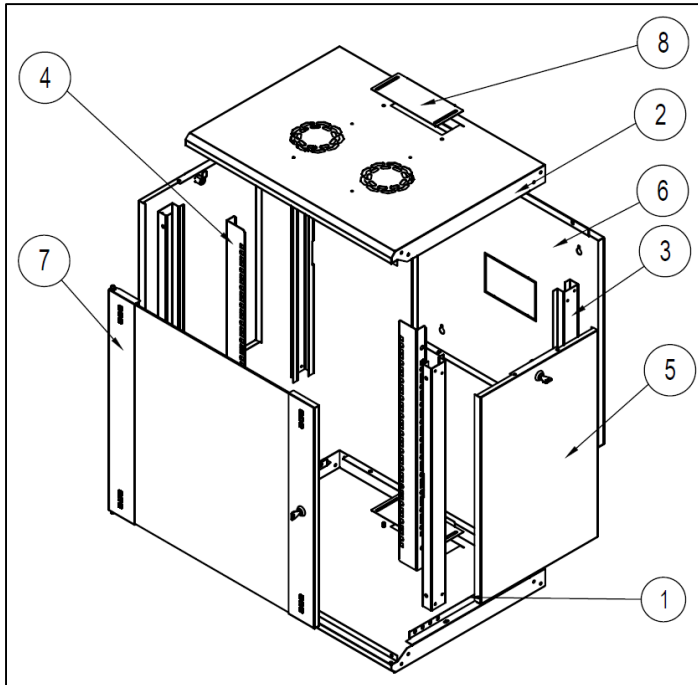
Nr	Material Description	qty
1	Bottom case	1
2	Top case	1
3	Corner Profile	4
4	19¨ Mountig rail	2*
5	Side panel	2
6	Rear panel	1
7	Front door	1
8	Sliding cable entry panel	2

* 19 ¨ Mountig rails are 4pcs with D:600mm Rack cabinets

	FASTENING SCREWS		
A		M5x8 CROSS RECESSED PAN HEAD (SELF TAPPING SCREW)	16 pcs
B		M5x12 CROSS RECESSED COUNTERSUNK HEAD SCREW	8 pcs
C		M5x12 CROSS RECESSED PAN HEAD SCREW	4 pcs
D		M6x15 CROSS RECESSED PAN HEAD SCREW	4 pcs

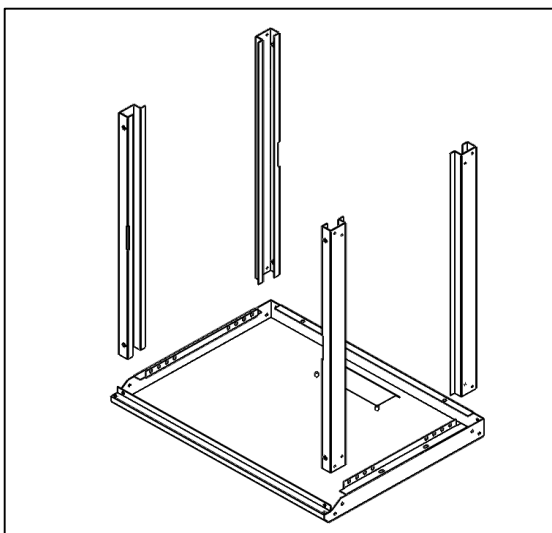Follow assembly instruction by starting from figure (1)

Figure 1

Place the bottom case on a flat-surface as shown on the **figure 1**.

Place the Corner profiles 4 pcs and Tighten M5X8 screws (16 pcs total) as shown on the **figure 2.**
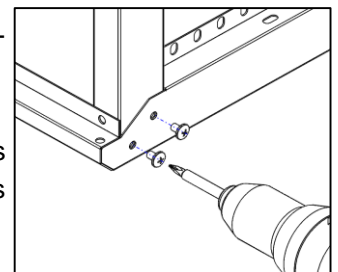
Tighten M5x12 screws (4 pcs total) as shown on the **figure 3 & 4**
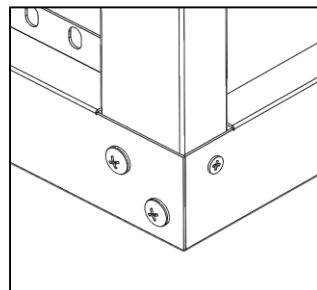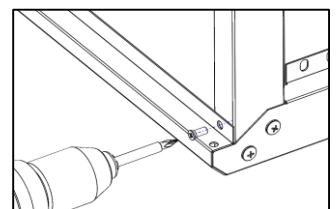

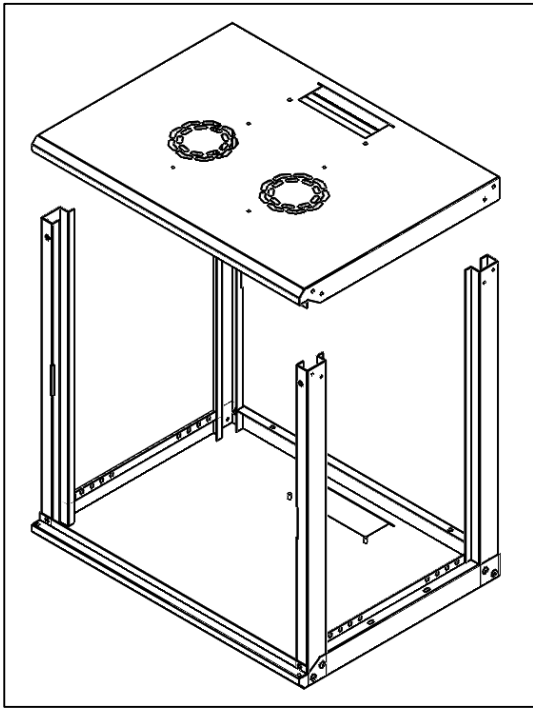Figure 2

Figure 4

Figure 3

Figure 5

Place the top case on the corner profiles as shown on the **figure 5** and tighten screws.
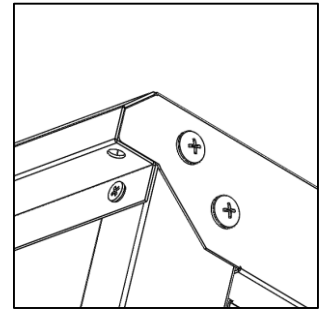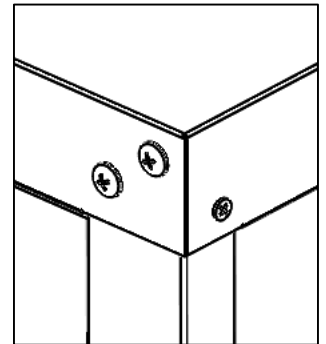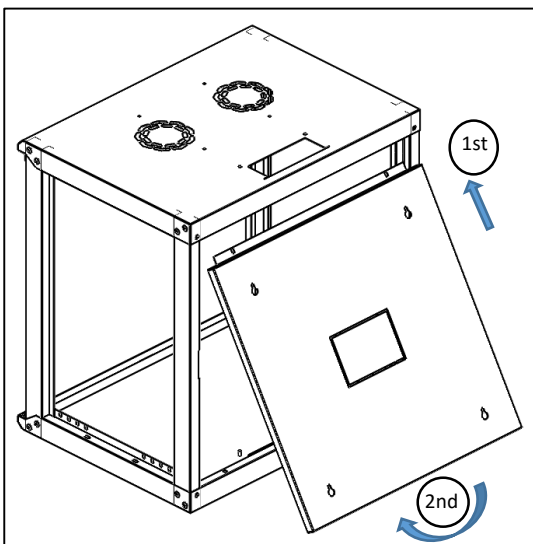

Figure 6

Figure 7

1st

2nd

Figure 8

Place the rear solid panel as shown on the **figure 8**
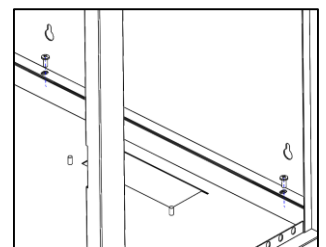(Pay attention on 1st and 2nd movement)

Figure 9

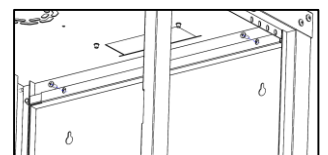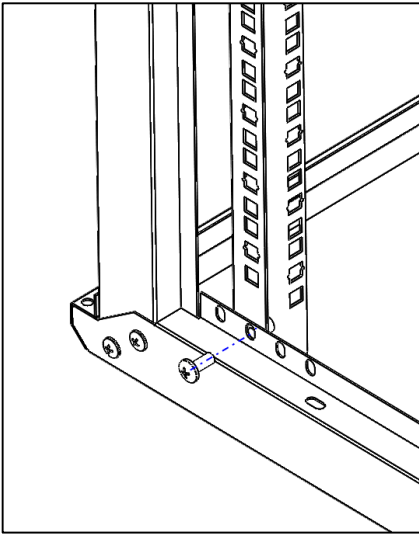Tighten M5x12 screws from inside the rack as shown on the **figure 9 & 10 .**

Figure 10

Figure 11

Place the 19¨ Mounting rails as shown on the **figure 11** and tighten M6X15 screws.

Note: 19¨ Mounting rails are 2 pcs for D:450mm & 4 pcs for D:600mm Rack cabinets .

Fasten barrel lock on the side panel as shown on the **figure 12 & 13.**
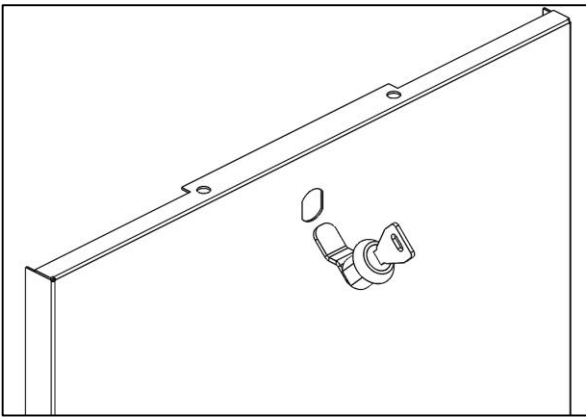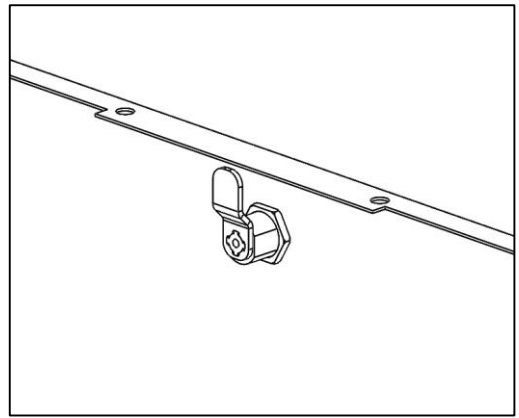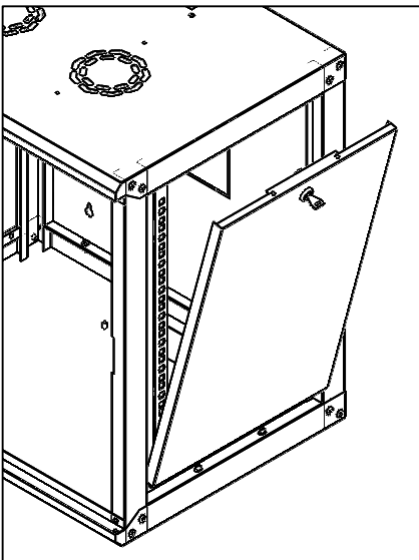

Figure 12

Figure 13

Figure 14

Place side panel as shown on the **figure 14 & 15**
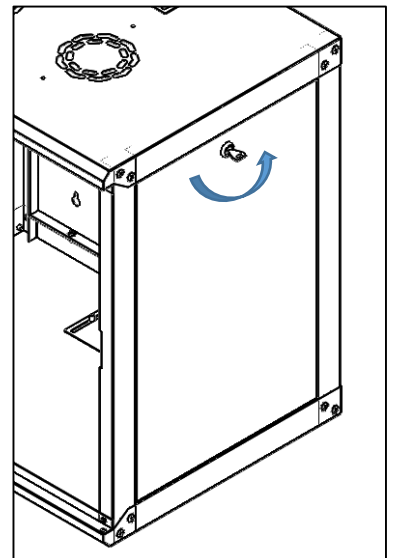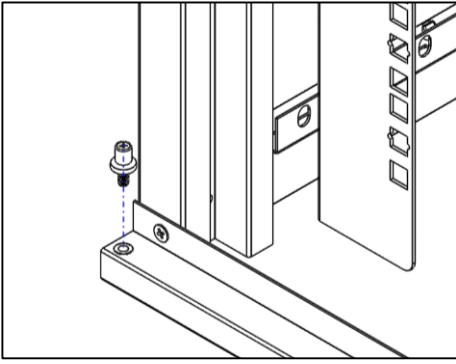

Figure 15

Figure 16

Fasten the screw type Pin on the bottom case for front door installation as shown on the **figure 16**.
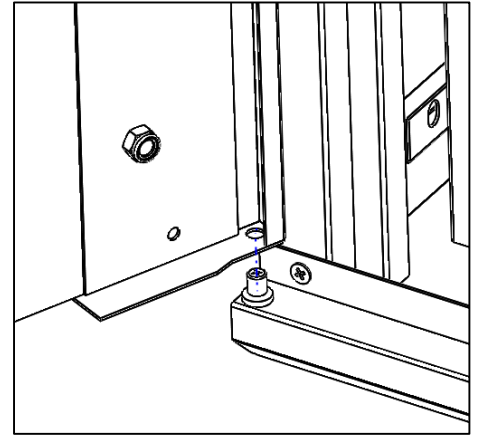

Figure 17

Place the front door frame on the screw type Pin as shown on the **figure 17**
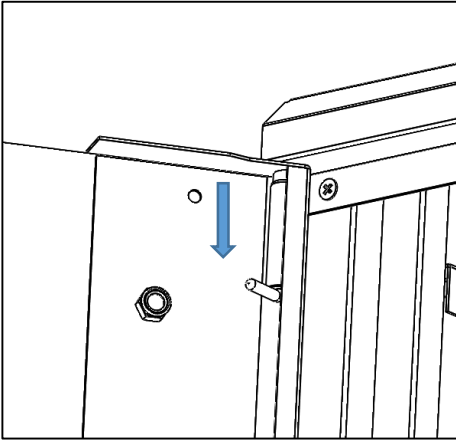

Figure 18

1st .Pull down the spring hinge
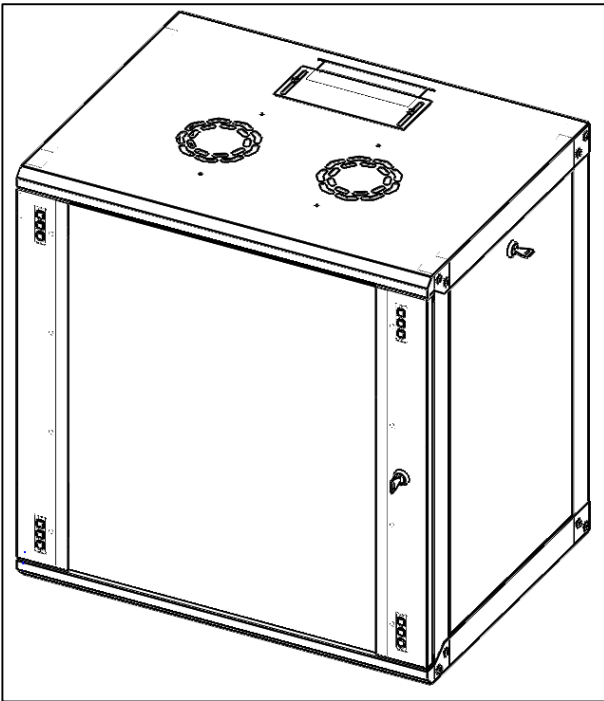2nd place the door frame between bottom and top case, as shown on the **Figure 18**

Figure 19

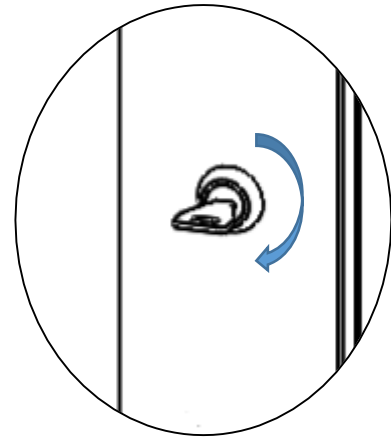The door is ready to close and lock it as shown on the **Figure 19 & 20.**

Figure 20

GÜNKO ENDÜSTRİYEL SİSTEMLER SAN. TİC. LTD. ŞTİ.
Ramazanoğlu Mah. Kaynarca Cad. Gürsu Sok. No:13/B Pendik/İSTANBUL
Tel: 0 216 595 06 52 Fax: 0 216 595 07 84 www.gunko.com.tr

www.gunko.com.tr

info@gunko.com.tr